

Button Functions

SYSTEM ON/OFF

Designed to send Power On/Off commands for up to five Components with one button press.

MENU

Displays the Applications Menu.

GUIDE

Displays the program guide listings.

SELECT

Selects highlighted screen options.

SETTINGS

Displays settings menu.

MUTE

Silences the audio. Press to activate. Press again to restore sound to the previous level.

VOLUME ▲/▼

Raises or lowers the sound level.

FAV

Displays favorite channels.

ON DEMAND

Provides direct access to On Demand channel.

DAY ◀/▶

Skip forward or backward a whole day in the program guide.

HELP

Opens Help.

M

Custom-programmable Macro button.

↶

Replays the previous few seconds of a program.

LIST

Displays a list of programs you have recorded, allowing you to select one for viewing.

ON-OFF

Opens or closes the PIP (Picture-in-Picture) window.

VIDEO SOURCE

Selects the video source.

SWAP

Swaps the contents of the PIP window and the main viewing screen so that the PIP window displays on the main screen.

POWER

Allows you to turn your TV, VCR, DVD, AUX and Cable Box On and Off.

AUX, DVD, VCR, TV, CBL

Used to select the component you want to operate and signals remote control activity.

INFO

Displays Information about the program currently playing or highlighted in the program guide.

EXIT

Exit from current screen.

PAGE +/-

Accesses pages above or below the Information currently displayed.

CURSOR NAVIGATION PAD (▲, ▼, ◀, ▶)

Navigate to and highlight an item from the on-screen choices.

CHANNEL ▲/▼

Selects the next higher or lower channel.

LAST

Returns to the previously tuned channel.

BYPASS

Controls By Pass function.

LIVE

Displays live television programming.

VCR/DVD/VOD KEYS

Perform standard VCR and DVD functions when in VCR and DVD mode, and Video-On-Demand functions when in CABLE mode.

NUMBER PAD

Enter numbers to tune to channels. Also, make numeric entries on on-screen menus.

ASPECT/#

Change the viewing aspect.

PIP CH +/-


Selects the next higher or lower channel in the PIP (Picture-in-Picture) window.

MOVE

Moves the PIP (Picture-In-Picture) window to another location on the screen.

LIGHT BUTTON

Press to backlight all keypad buttons. Press again to turn off (or simply wait 10 seconds for automatic shut-off).

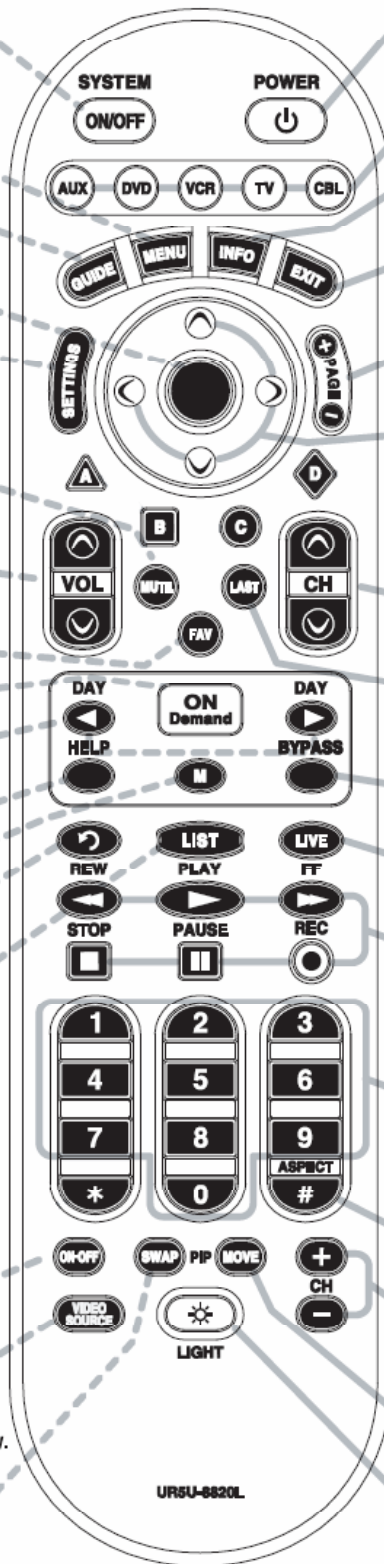

Bringing Glasgow the Future... *Faster!*